
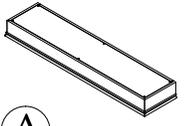
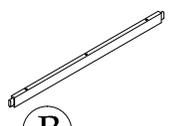
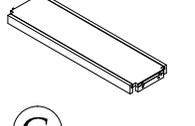
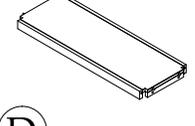
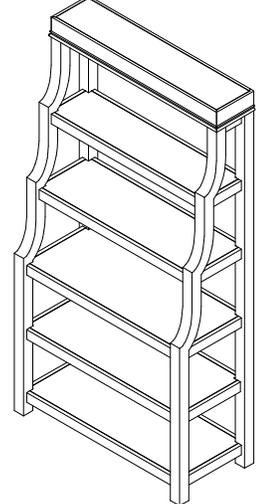
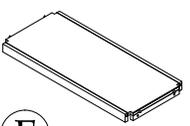
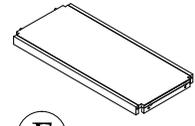
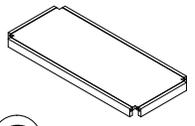
 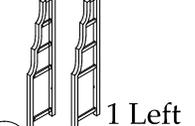
 



Components and Hardware List

<p>Top Frame</p>  <p>(A) 1 pc.</p>	<p>Top Stretcher</p>  <p>(B) 1 pc.</p>	<p>Wood Shelf 1</p>  <p>(C) 1 pc.</p>	<p>Wood Shelf 2</p>  <p>(D) 1 pc.</p>	 <p>#21257 Open Display Cabinet</p>			
<p>Wood Shelf 3</p>  <p>(E) 1 pc.</p>	<p>Wood Shelf 4</p>  <p>(F) 1 pc.</p>	<p>Removable Shelf</p>  <p>(G) 1 pc.</p>	<p>Side Frame</p>  <p>(H) 1 Left 1 Right</p>				
<p>X Frame</p>  <p>(I) One Front & One Back</p>	<p>M1/4"-20 x 1-1/2" Long Allen Head Bolt</p>  <p>(J) 15 pcs.</p>	<p>M1/4"-20 x 1-1/4" Long Allen Head Bolt</p>  <p>(K) 16 pcs.</p>	<p>1/4" Spring Washer</p>  <p>(M) 31 pcs.</p>				
<p>1/4" x 19 x 2mm Flat Washer</p>  <p>(N) 31 pcs.</p>	<p>4mm Allen Wrench</p>  <p>(L) 1 pc.</p>	<p>Leveler (installed)</p>  <p>(O) 4 pcs.</p>	<p>Shelf Pins</p>  <p>(P) 4 pcs.</p>			<p>3 x 12mm Wood Screw</p>  <p>(Q) 4 pcs.</p>	<p>Anti-tipping restraint</p>  <p>(R) 1 pc.</p>


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

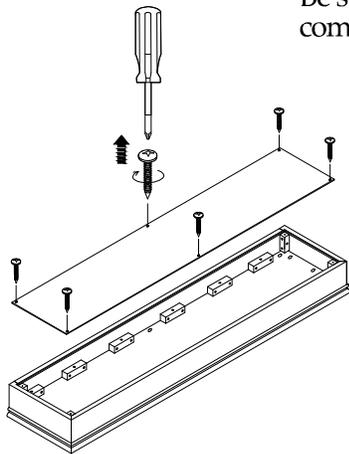

STEP 1

Step 1: Lay the Top Frame (A) on a soft surface and using your Phillips Screwdriver, remove the screws attaching the Top Panel and lay them aside.

Step 2: Attach the Top Stretcher (B) on the bottom side of the Top Frame using the 1-1/2" long Allen Head Bolts (J), Spring Washer (M) and Flat Washer (N). Do not fully tighten until Step 1.

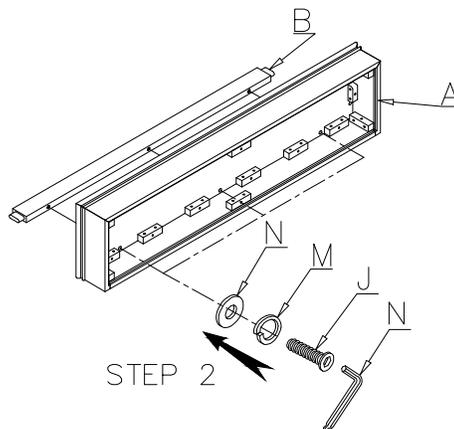


STEP 2

Step 3: Assemble the Wood Shelves 1, 2, 3 and 4 at the proper positions between the Left and Right Side Frames (H), using the 1-1/4" Long Bolts (K), Spring Washers (M) and Flat Washers (N). Attach the Top Frame using the 1-1/2" Long Bolts (J) and Washers. Tighten all Bolts just installed using the Allen Wrench (L).

Step 4: Reattach the Top Panel to the top of the Top Frame using your Phillips Screwdriver and the screws removed earlier.

Step 5: Stand the Display Cabinet upright and attach the Front and Back X-Frame to the back of the Display Cabinet using the 1-1/2" Long Bolts (J) and Washers. Tighten Bolts using the Allen Wrench.

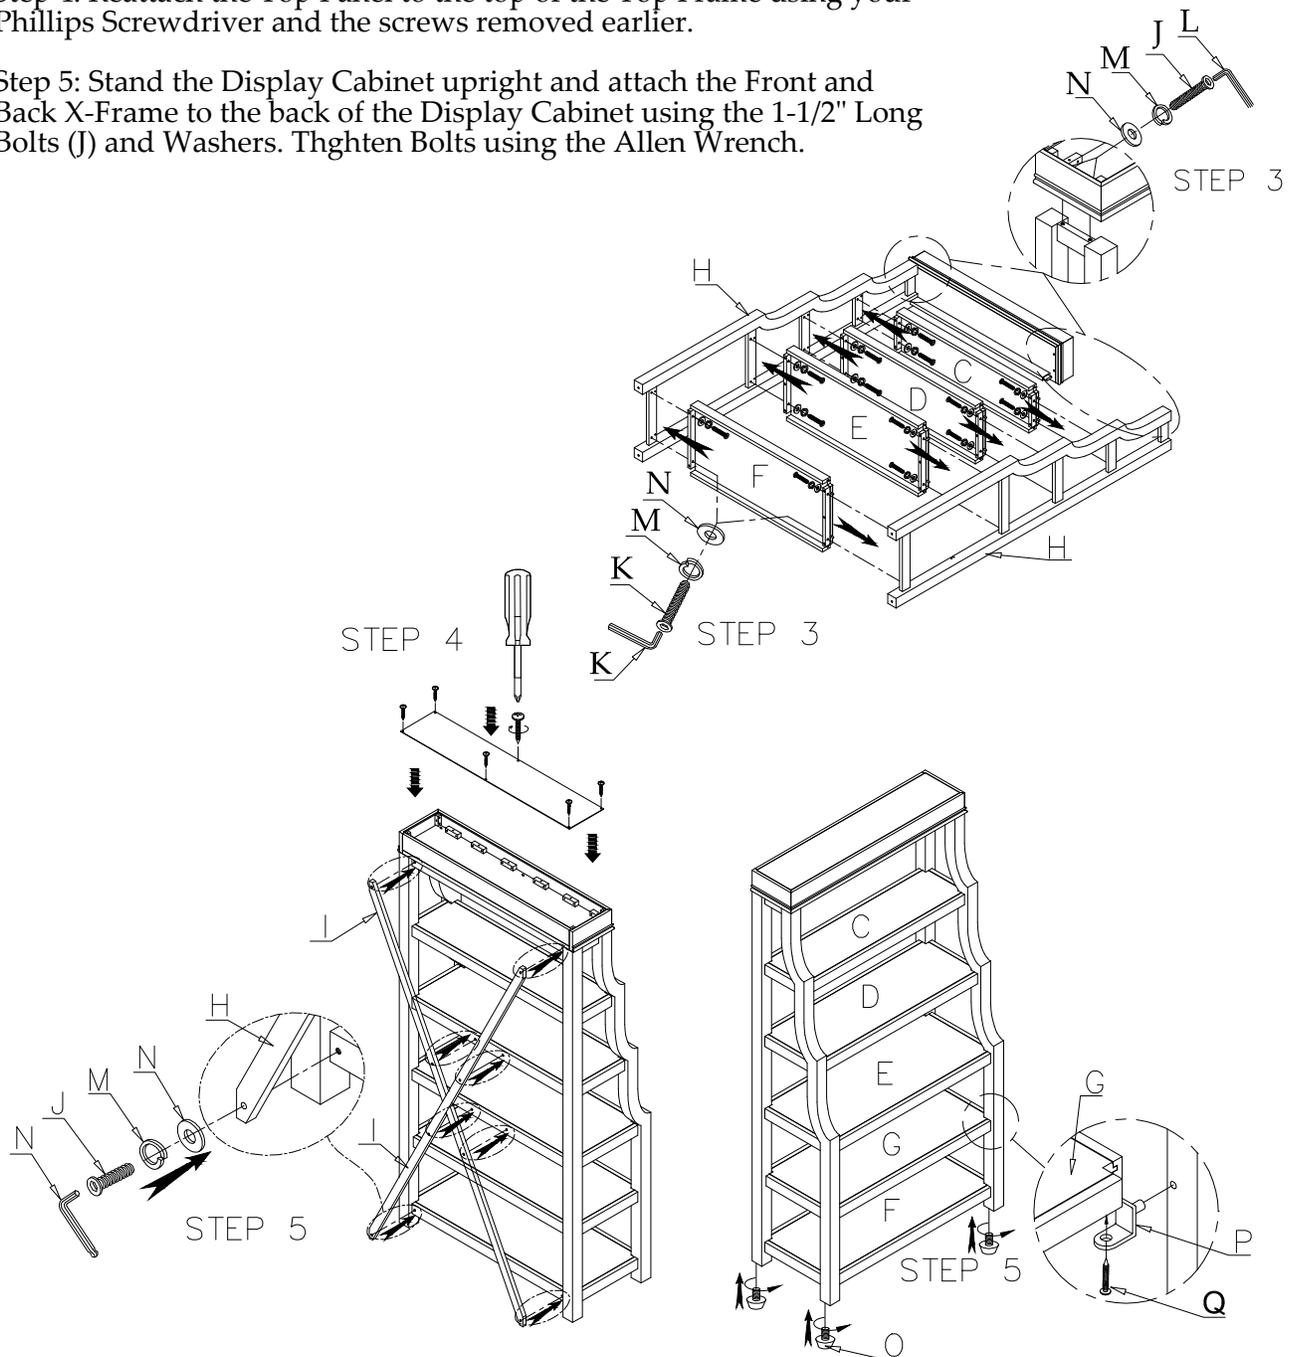


Step 5. Install the Shelf Supports (P) into the holes on the Side Frames. Install the Removable Shelf (G) onto the Shelf Pins.

The Levelers underneath the Bottom Corners can be adjusted to compensate for uneven flooring if necessary.

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

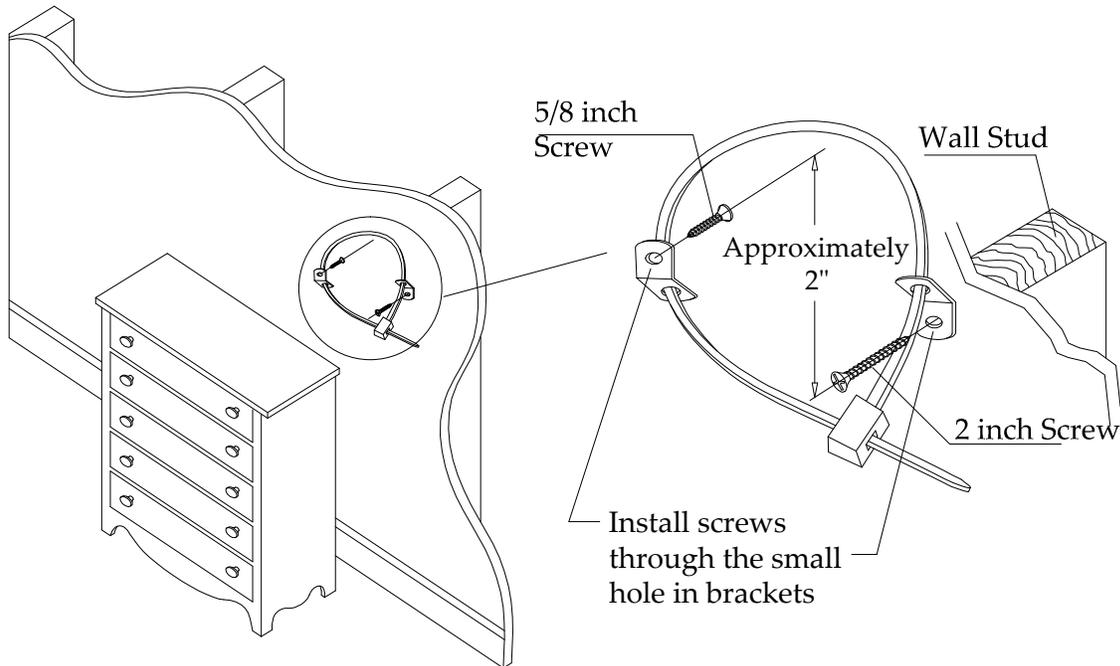

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.