

email: info@riverside-furniture.com

Rosalie Bedroom Assembly Instructions


Page 1 of 5

Made in Viet Nam

Twin Upholstered Bed

Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

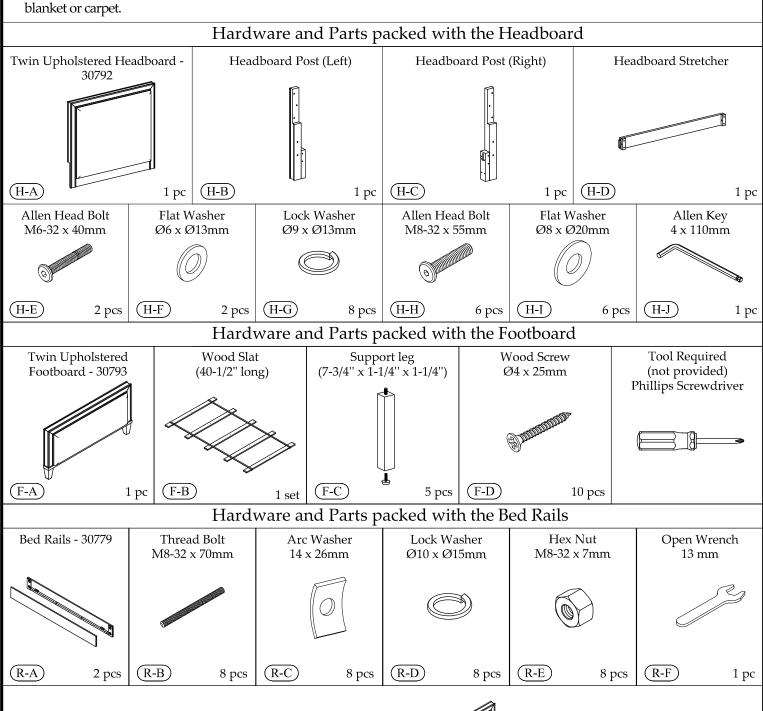


3/3 Twin Bed

30792 - 3/3 Upholstered Headboard

30793 - 3/3 Upholstered Footboard

30779 - 3/3-4/6 Twin-Full Bed Rails

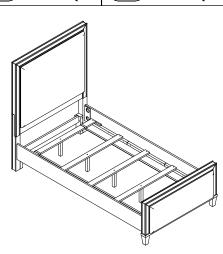


Riverside FURNITURE email: info@riverside-furniture.com Rosalie Bedroom Assembly Instructions

Made in Viet Nam

Page 2 of 5

Twin Upholstered Bed

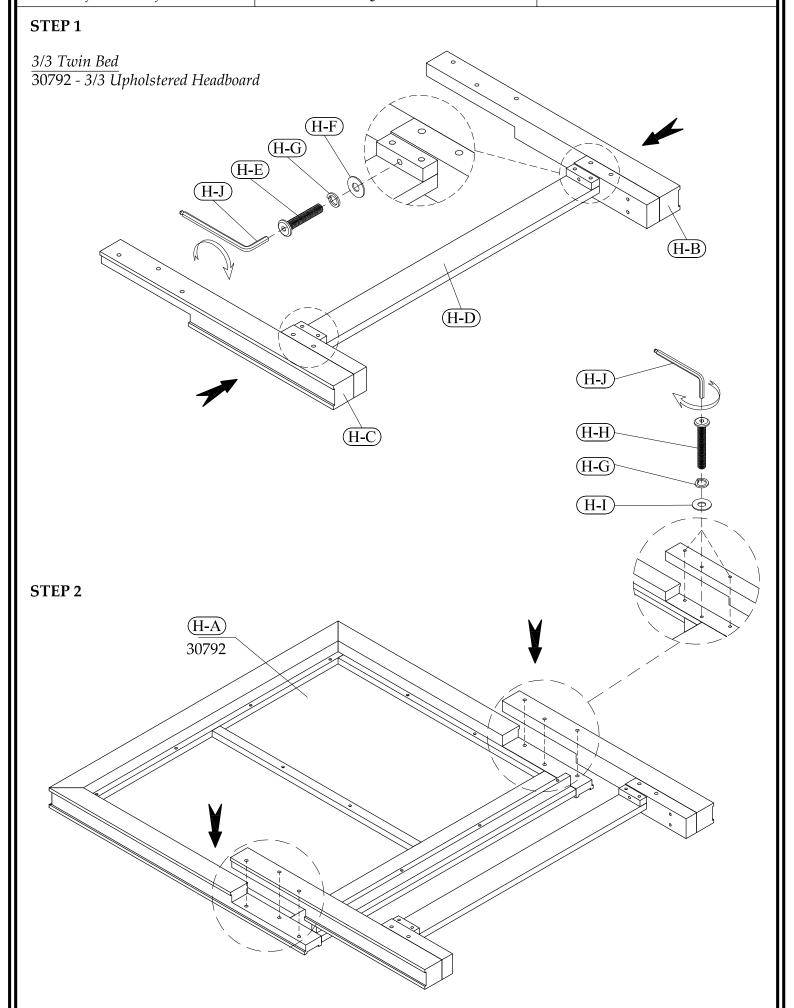

Page 3 of 5 Rosalie Riverside Made in Viet Nam Bedroom Assembly Instructions Twin Upholstered Bed email: info@riverside-furniture.com STEP 3 (R-B) H-A) 30792 F-A 30793 STEP 4 (H-A) (R-C) (R-D) R-E (R-F) (R-A) 30779 (F-A)

Riverside


email: info@riverside-furniture.com


Rosalie Bedroom Assembly Instructions Page 4 of 5

Made in Viet Nam

Twin Upholstered Bed

STEP 5

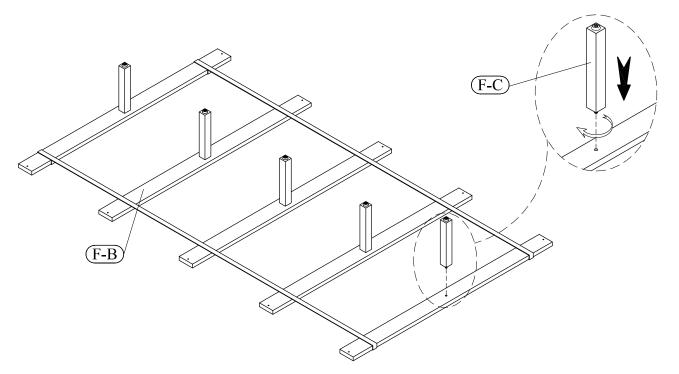

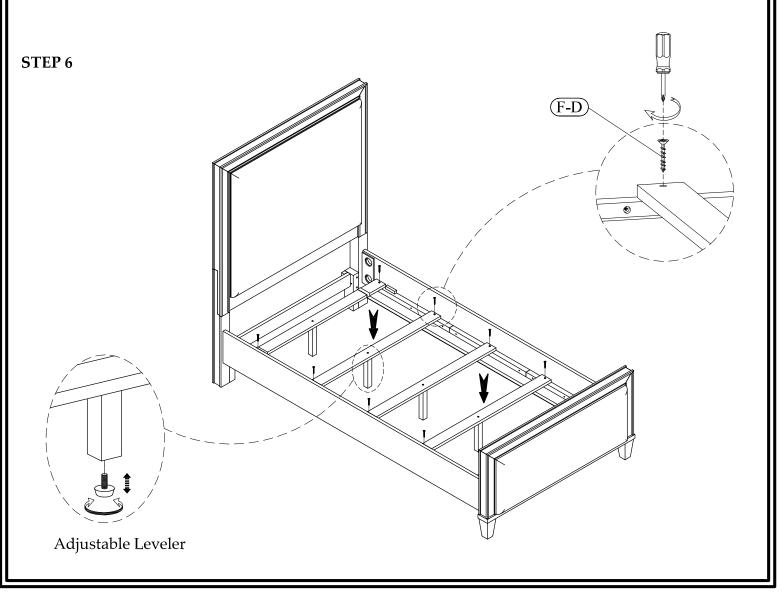




Rosalie Bedroom Assembly Instructions

Page 5 of 5

Made in Viet Nam

Twin Upholstered Bed

3/3 Twin Bed 30792 - 3/3 Upholstered Headboard

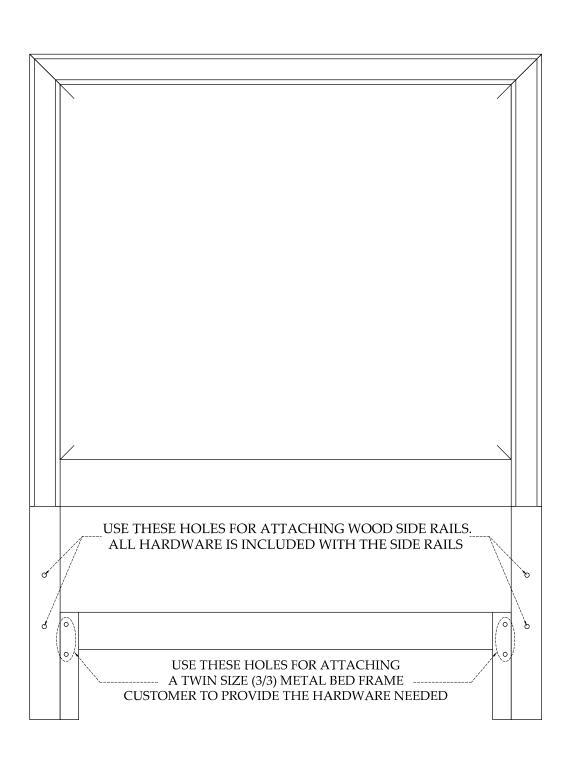

THE HEADBOARD MAY BE USED ALONE WITH A TWIN SIZE METAL BED FRAME