
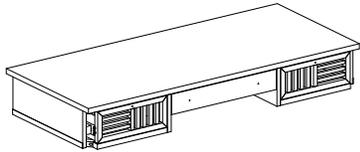


## Components and Hardware List

<p>Top</p>  <p><b>A</b> 1 pc.</p>		<p>Legs</p>  <p><b>B</b> 4 pcs.</p>	
<p><b>H1</b> <math>\varnothing 6 \times 1.0 \times 60\text{mm}</math> Allen Head Bolt (2-3/8" Long) 8 pcs.</p> 	<p><b>H2</b> <math>\varnothing 9 \times \varnothing 13\text{mm}</math> Allen Head Bolt 8 pcs.</p> 	<p><b>H3</b> <math>\varnothing 8 \times \varnothing 20\text{mm}</math> Flat Washer 8 pcs.</p> 	<p><b>H4</b> <math>\varnothing 4 \times 0.7 \times 30\text{mm}</math> Machine Screw (1-1/4" Long) 2 pcs.</p> 
<p><b>H5</b> <math>\varnothing 4 \times 0.7 \times 35\text{mm}</math> Machine Screw (1-3/8" Long) 2 pcs.</p> 	<p><b>H6</b> Hardware Knob 4 pcs.</p> 	<p><b>H7</b> <math>4 \times 110\text{mm}</math> Wrench 1 pc.</p> 	

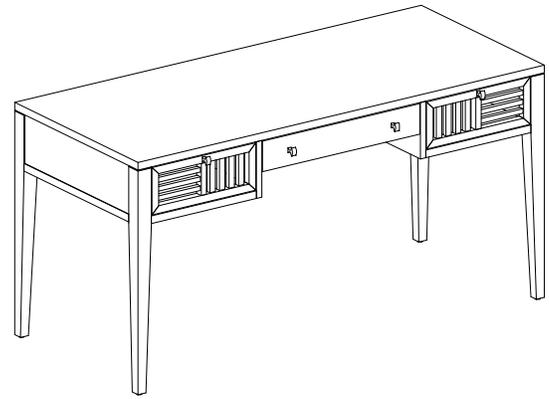


#15330  
Parquet Writing Desk

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

### Steps:

1. Remove the drawers and lay them aside. Take note where the two end drawers are removed from so they can be reinstalled back into the correct location.



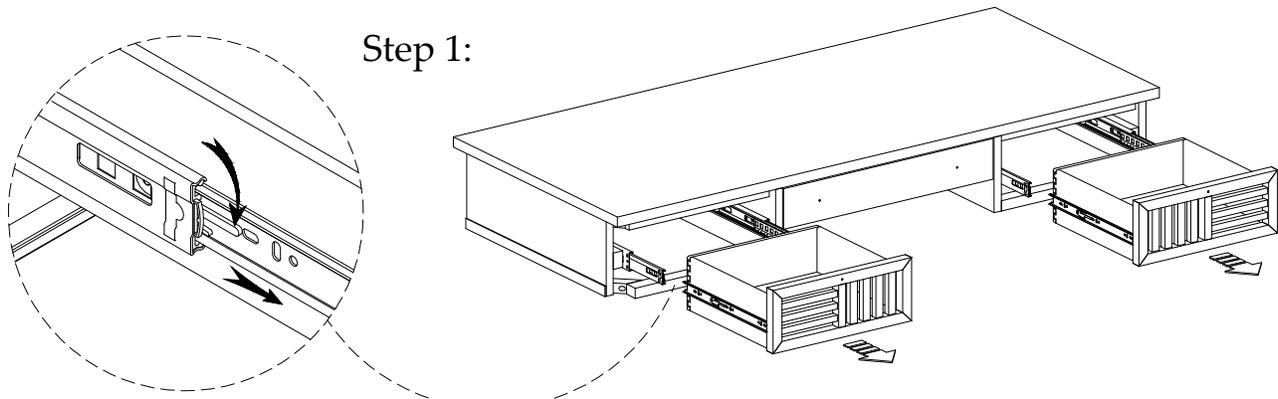


To remove the drawer:

- A. Pull the drawers fully open so the black latch is visible in the inside channel of the guides.
- B. Release the latches by simultaneously pushing one lever up and the other down.
- C. At the same time, pulling the drawer forward until the slides release.

**Steps:**

2. Place the Top (A) face down on a soft and smooth surface such as a blanket or carpet.
3. Attach a Leg (B) into each corner of the Desk using the 60mm long Bolts (H1) Spring Washers (H2) and Flat Washers (H3). Adjust the Leg in the corner if necessary to have the same reveal on both sides and tighten using the Allen Wrench (H7).
4. After all four Legs are attached, turn the Desk upright and reinstall the drawers.
5. Attach the Drawer Knobs (H6) using the Hardware Screws (H4 & H5) to the Drawer Fronts as shown, and using your screwdriver.

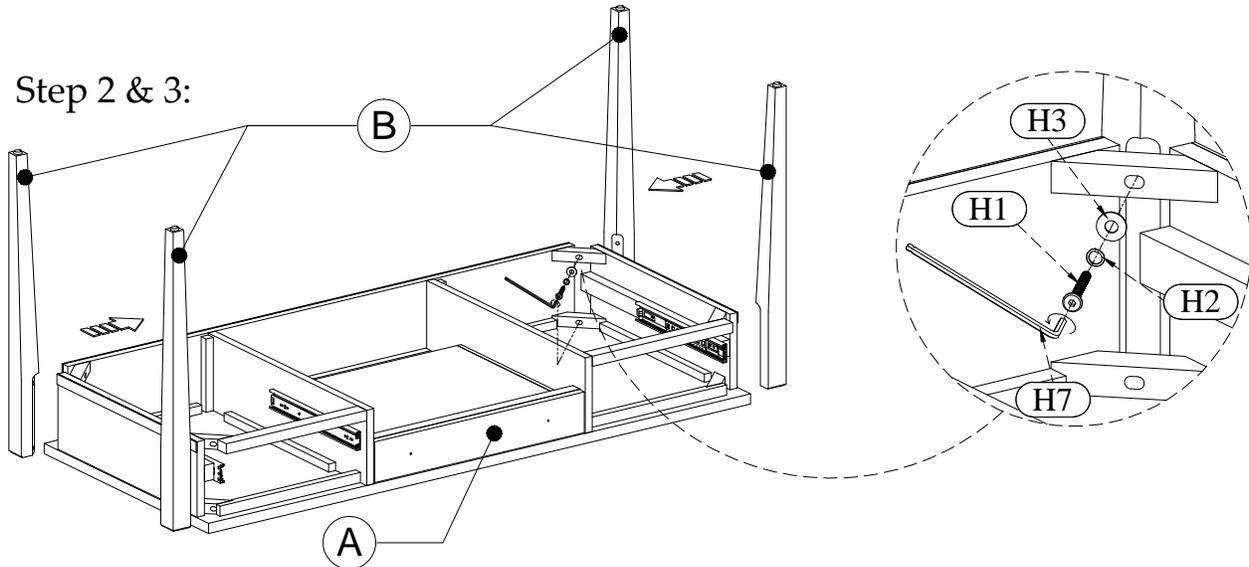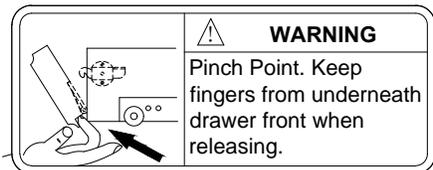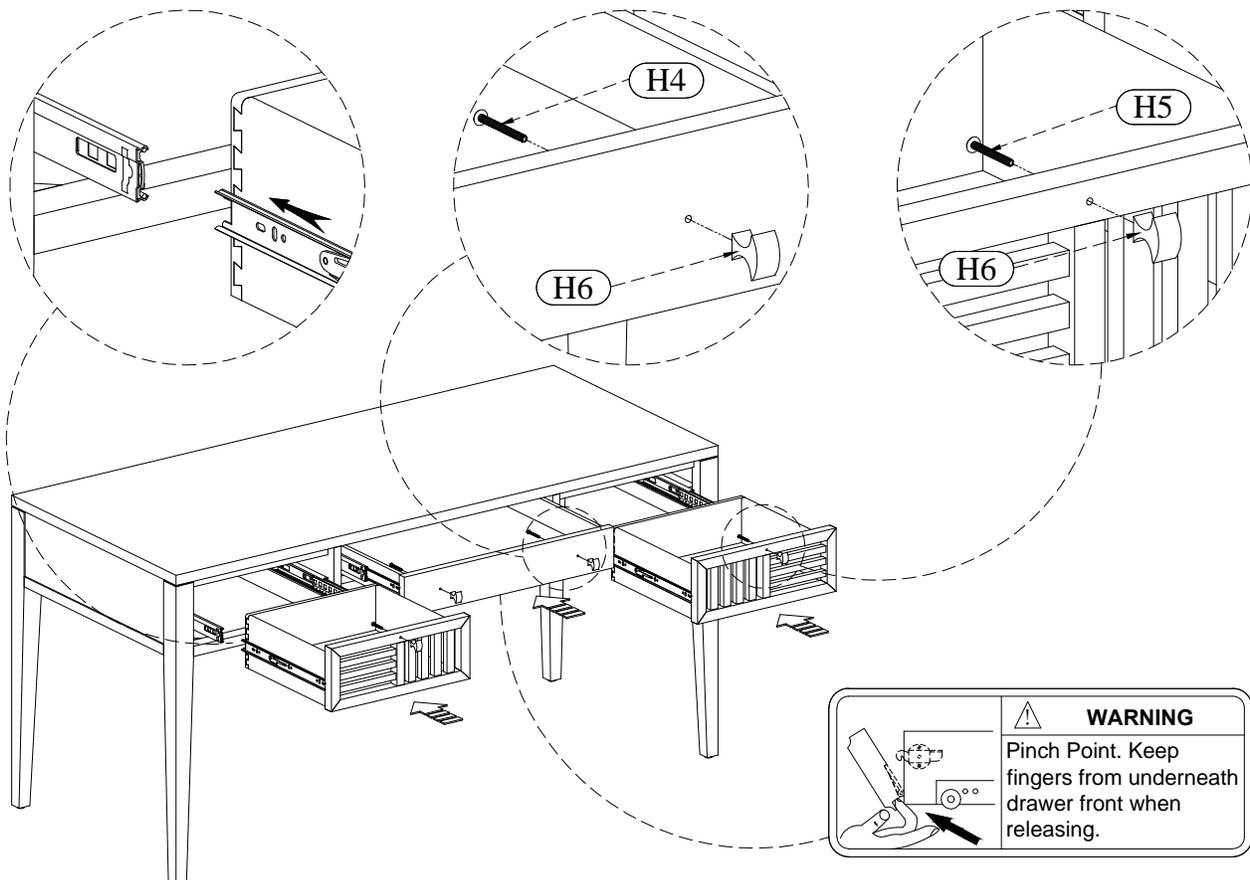**Step 2 & 3:****Step 4 & 5:**

To reinstall the drawers, carefully align the channels of the guide and push drawer back into cabinet. Open and close drawer fully a couple times to verify proper operation.