

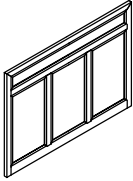





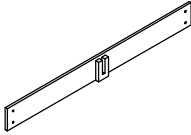


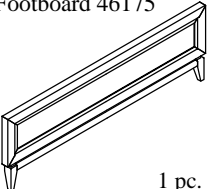




Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.














Hardware and Parts packed with the Headboard

| | | | | |
|--|--|---|--|---|
|  (H-A) 1 pc. |  (H-B) 1 pc. |  (H-C) 1 pc. |  (H-D) 1 pc. | |
|  (H-E) 4 pcs. |  (H-F) 6 pcs. |  (H-G) 10 pcs. |  (H-H) 10 pcs. |  (H-I) 1 pc. |

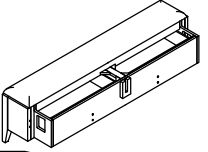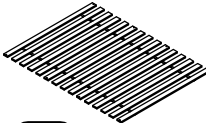






Hardware and Parts packed with the Footboard

| | | | | |
|--|--|--|--|--|
|  (F-A) 1 pc. |  (F-B) 4 pcs. |  (F-C) 4 pcs. |  (F-D) 8 pcs. |  Screw Driver not included |
|--|--|--|--|--|

Hardware and Parts packed with the Storage Footboard

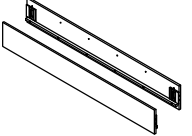
| | | | | | | |
|--|---|--|--|--|--|--|
|  (F-A1) 1 pc. |  (F-B1) 1 Set. |  (F-C1) 1 pc. |  (F-C2) 1 pc. |  (F-D1) 1 pc. |  (F-E) 2 pcs. | |
|  (F-F) 6 pcs. |  (F-G) 2 pcs. |  (F-H) 8 pcs. |  (F-I) 8 pcs. |  (F-J) 1 pc. |  (F-K) 8 pcs. |  Screw Driver not included |

Hardware and Parts packed with the Bed Rail

| | | | | | | |
|--|---|---|--|---|---|---|
|  (R-A) 2 pcs. |  (R-B) 8 pcs. |  (R-C) 8 pcs. |  (R-D) 8 pcs. |  (R-E) 8 pcs. |  (R-F) 1 pc. |  (R-G) 1 pc. |
|--|---|---|--|---|---|---|

- 46172 -- 5/0-6/6 Bed Rails 5/0 Queen Bed
- 46174 -- 4/6-5/0 Panel Headboard
- 46175 -- 5/0 Panel Footboard
- 46173 -- 5/0 Uph Bench Storage Footboard

5/0 Queen Bed
46174 -- 4/6-5/0 Panel Headboard

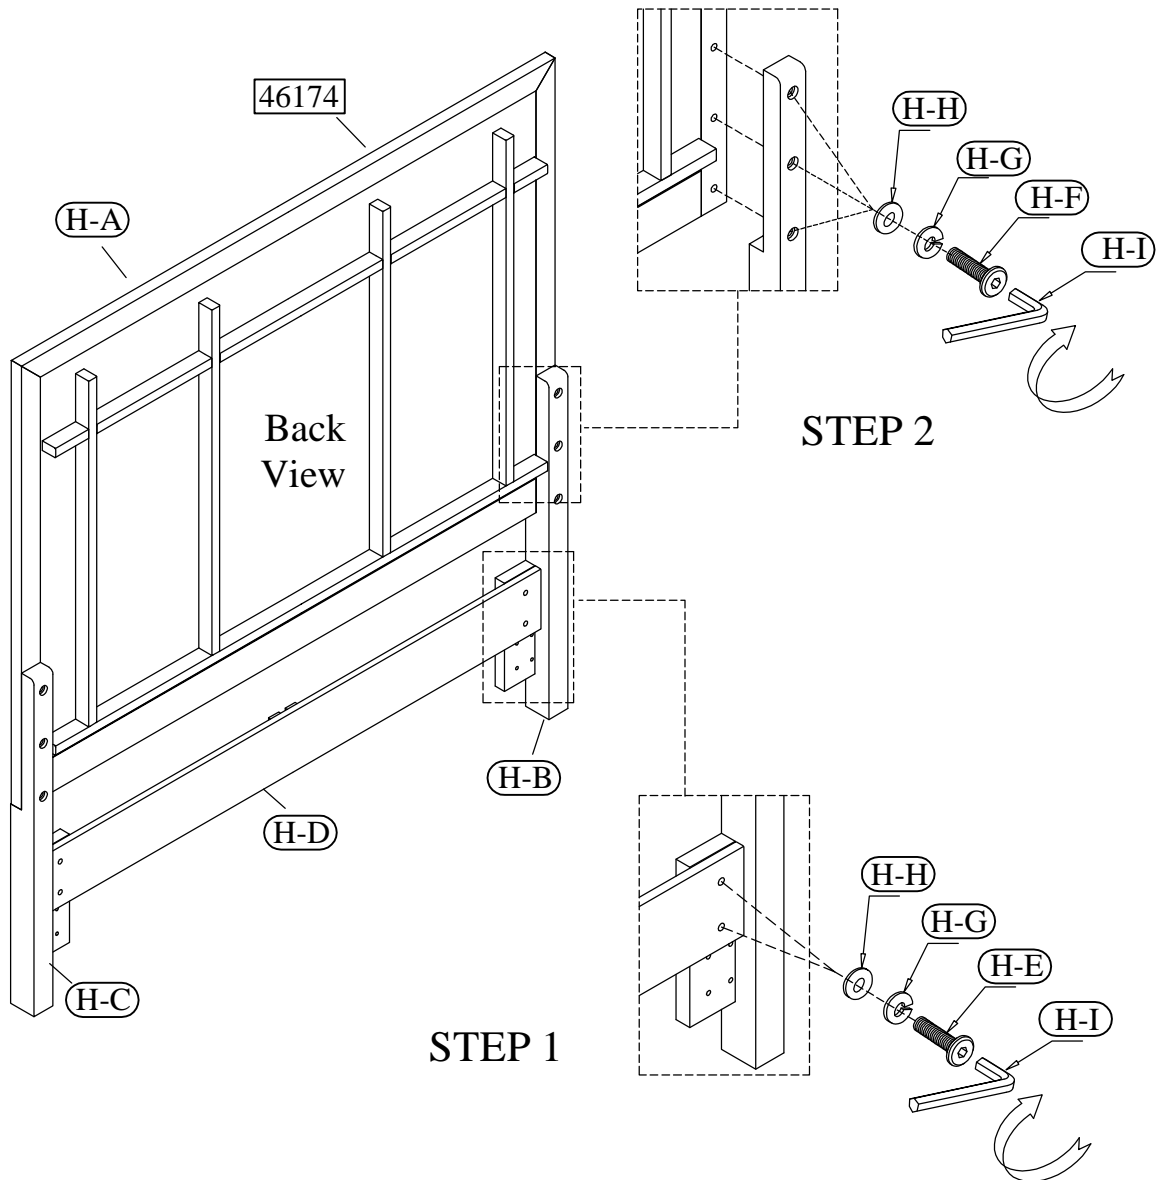


5/0 Queen Bed


46174 -- 4/6-5/0 Panel Headboard

46175 -- 5/0 Panel Footboard


STEP 3

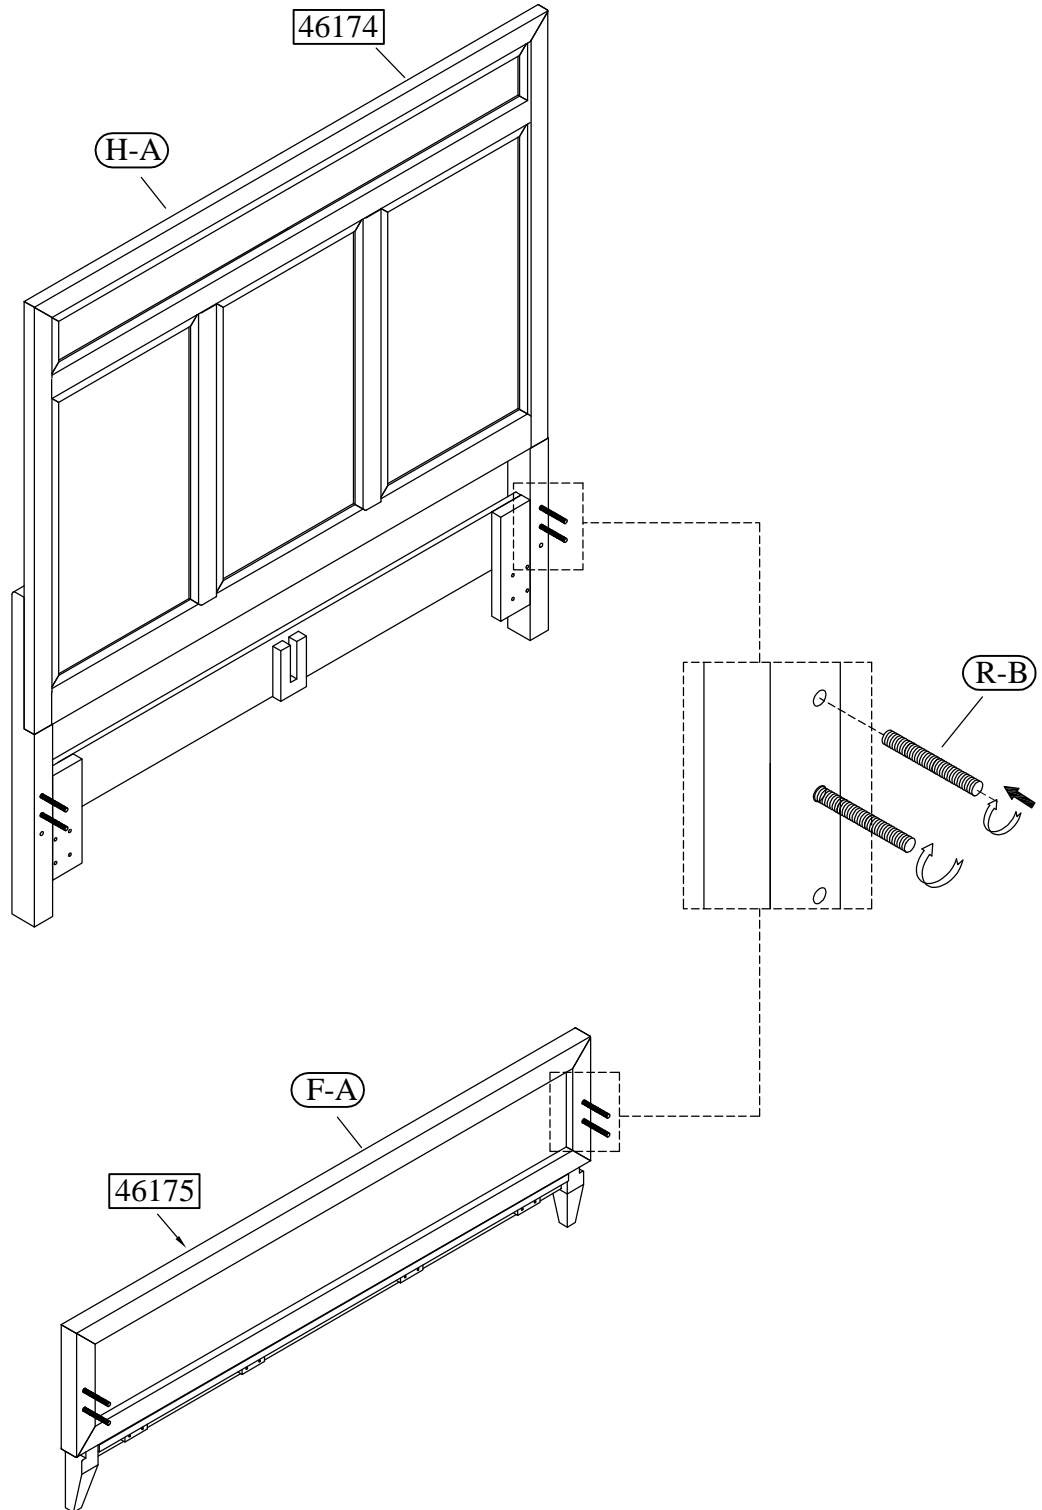

STEP 4

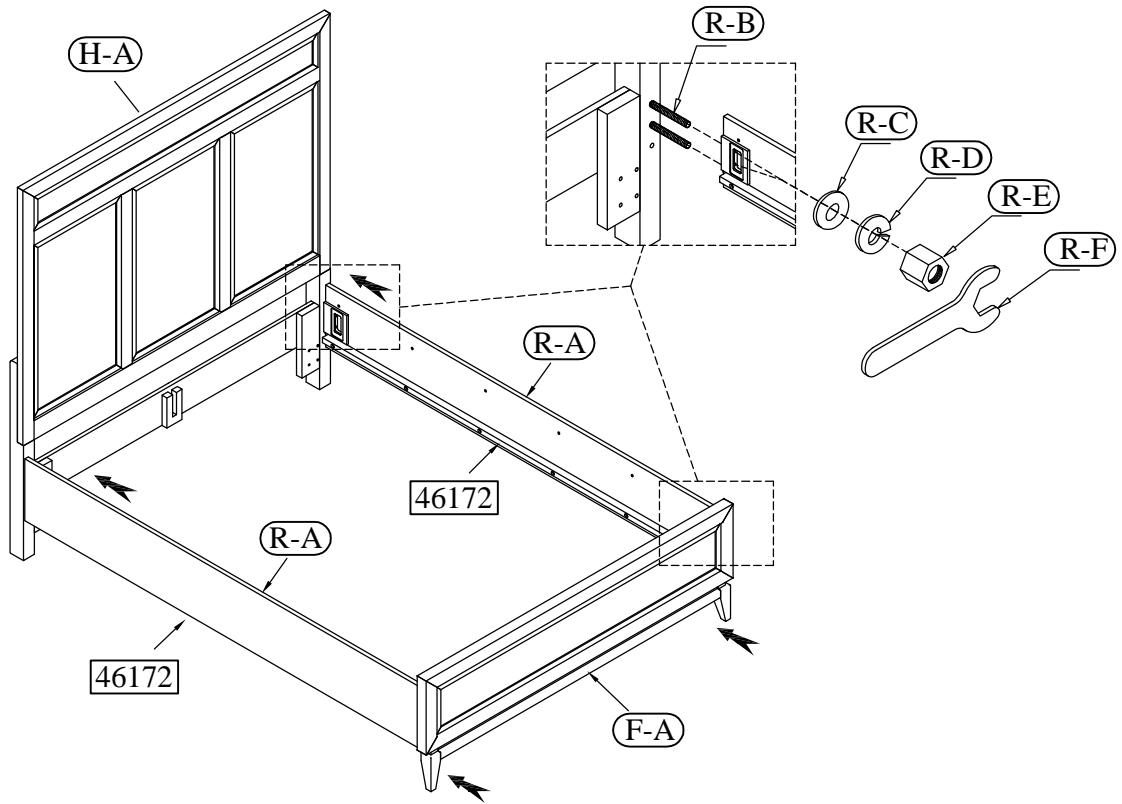


STEP 5

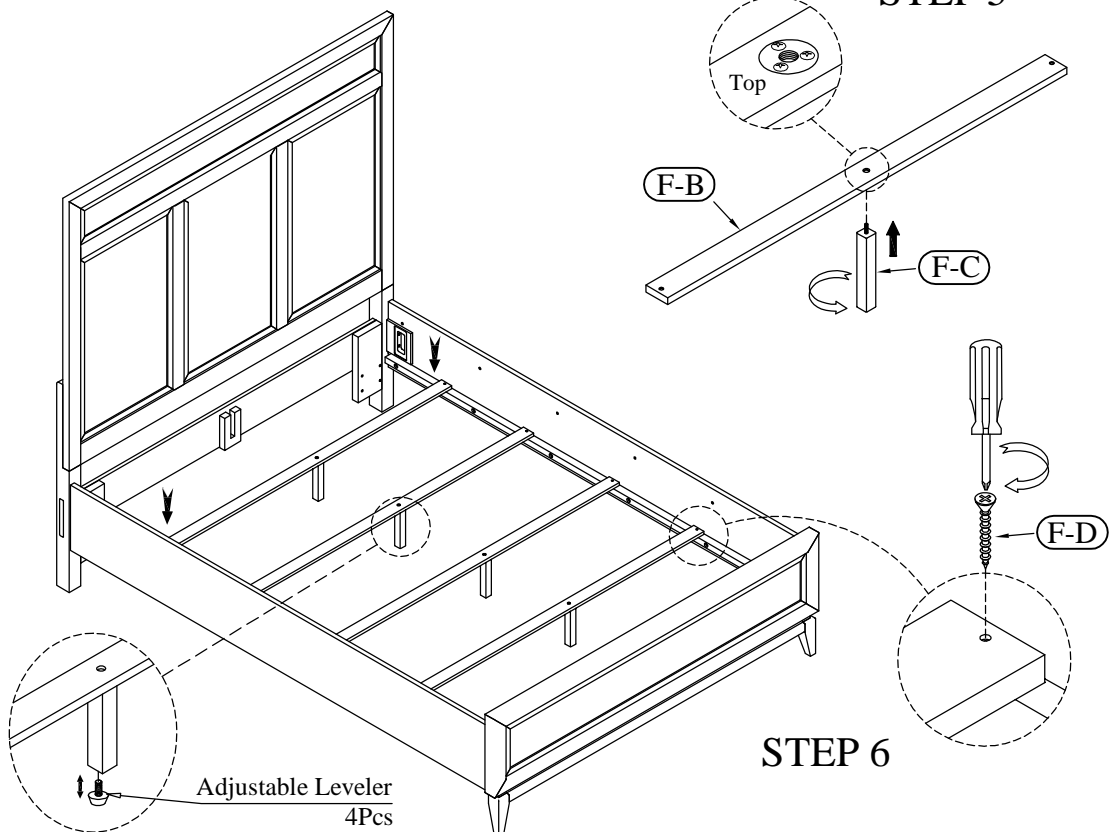


STEP 6

5/0 Queen Bed
46173 -- 5/0 Uph Bench Storage Footboard

STEP 7

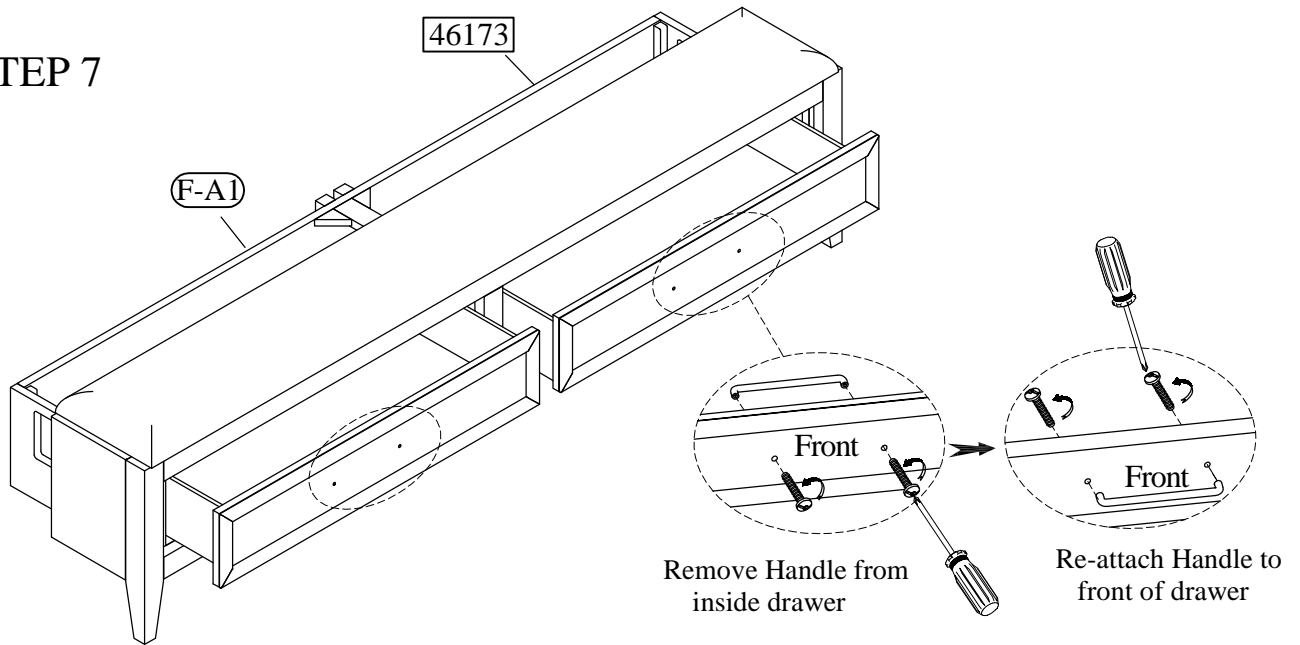

STEP 8

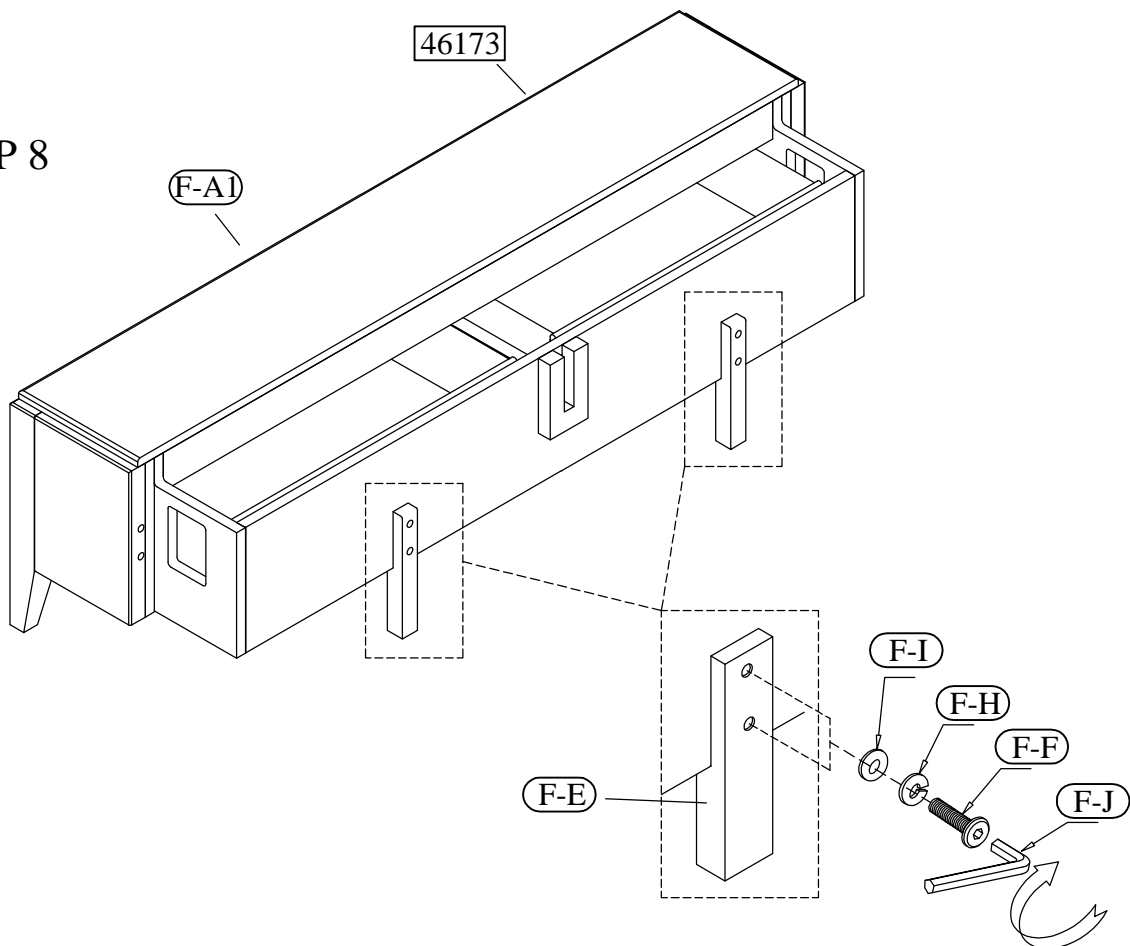


5/0 Queen Bed


46174 -- 4/6-5/0 Panel Headboard

46173 -- 5/0 Uph Bench Storage Footboard

46172 -- 5/0-6/6 Bed Rails

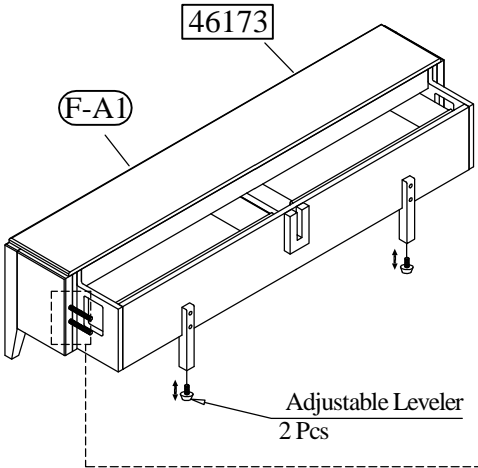


STEP 9

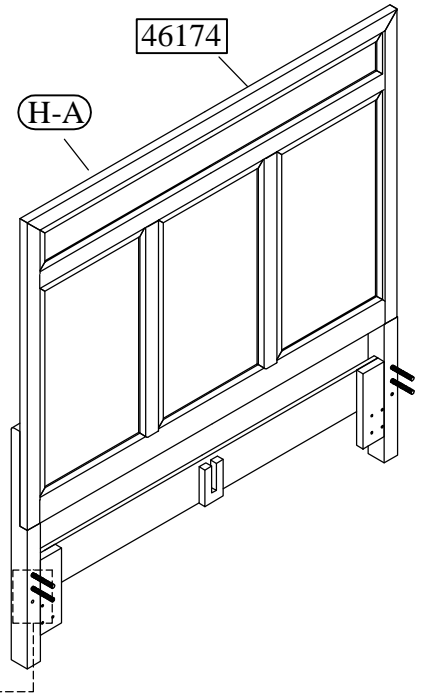


STEP 10

Remove Bolts (Ø1/4"-20 x 1-5/8")

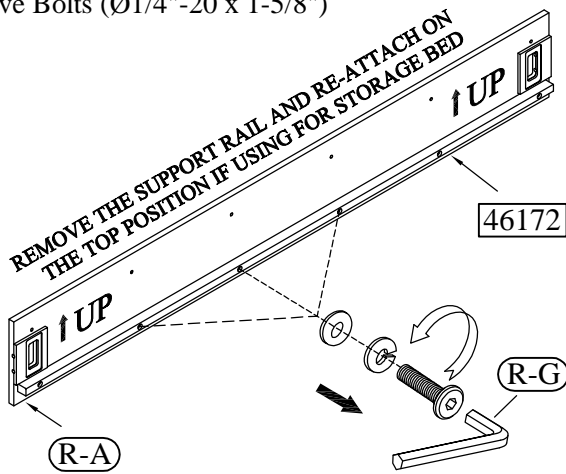


STEP 11


Re-Attach Bolts (Ø1/4"-20 x 1-5/8")

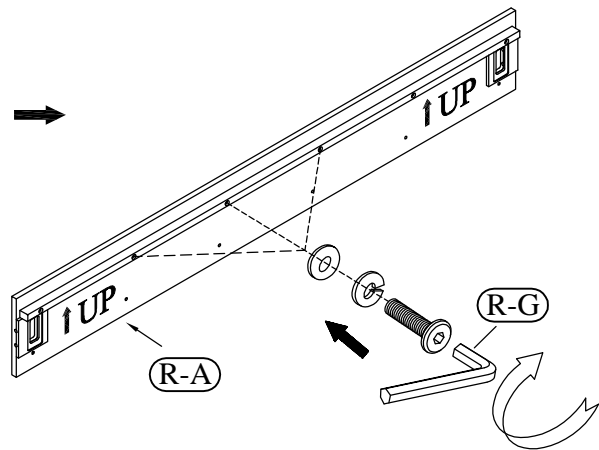


STEP 12

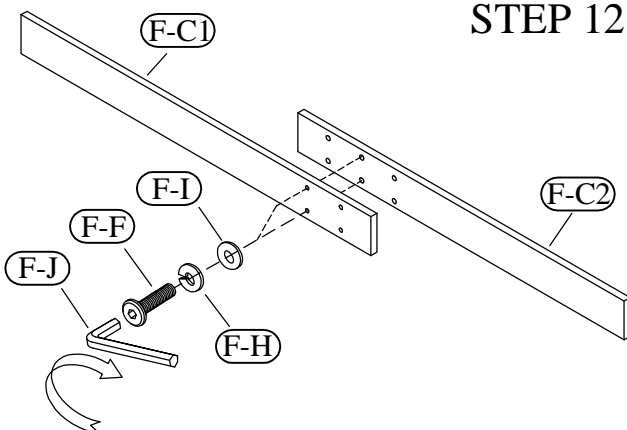


STEP 13

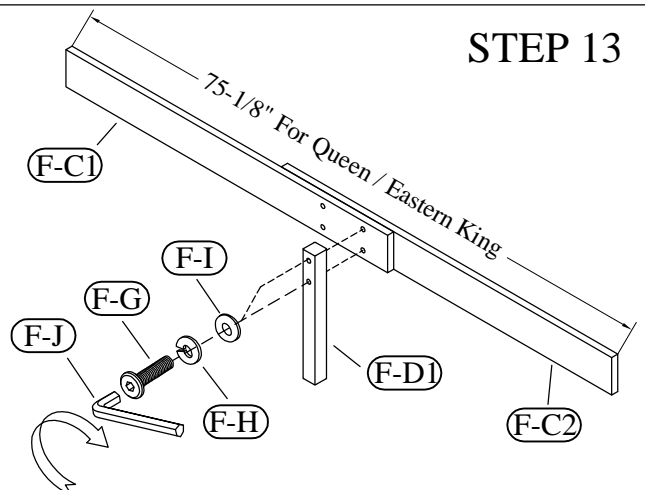

STEP 14

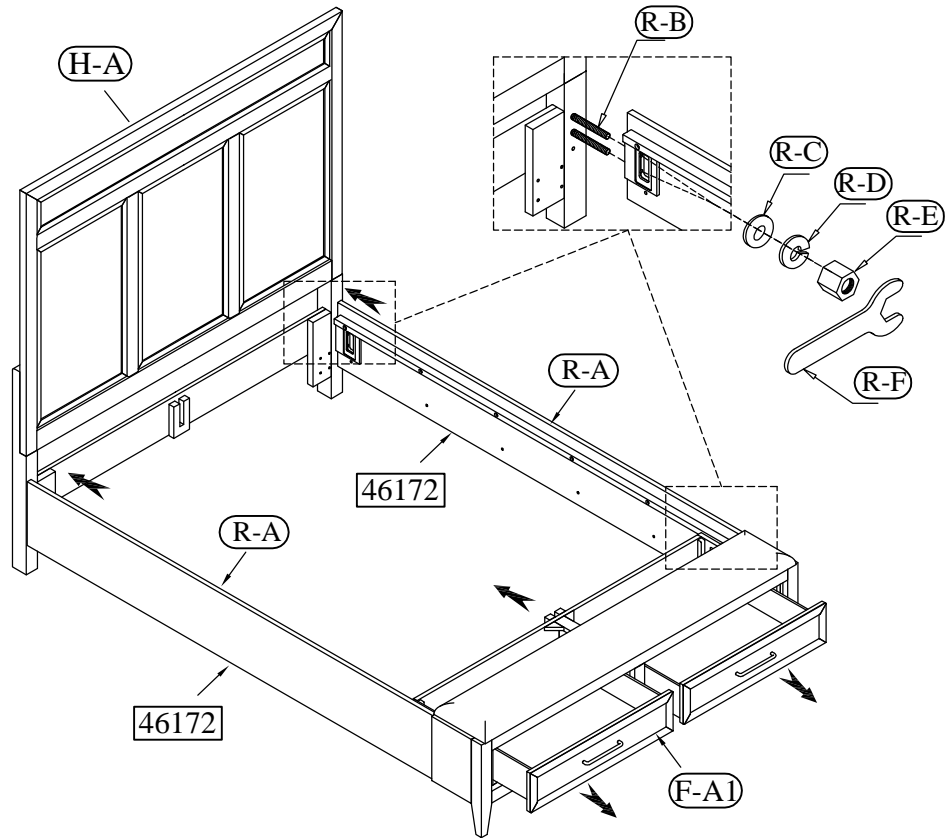


STEP 15

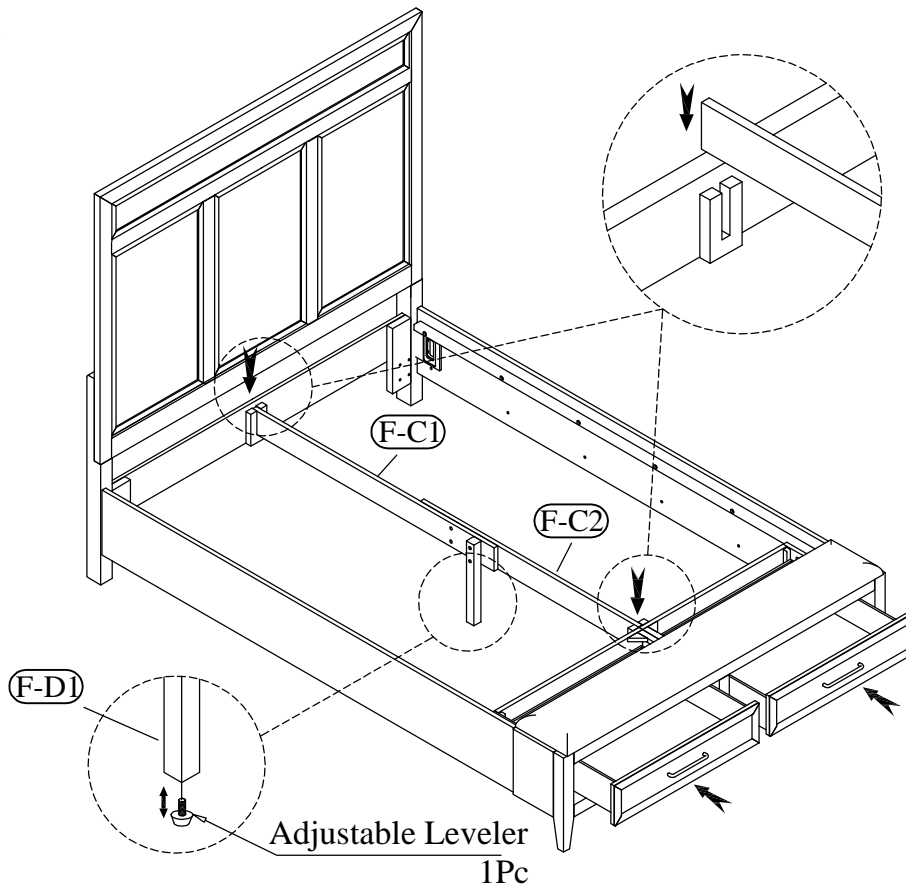


* IMPORTANT*

Must Attach Center Support to Headboard and Footboard

STEP 16

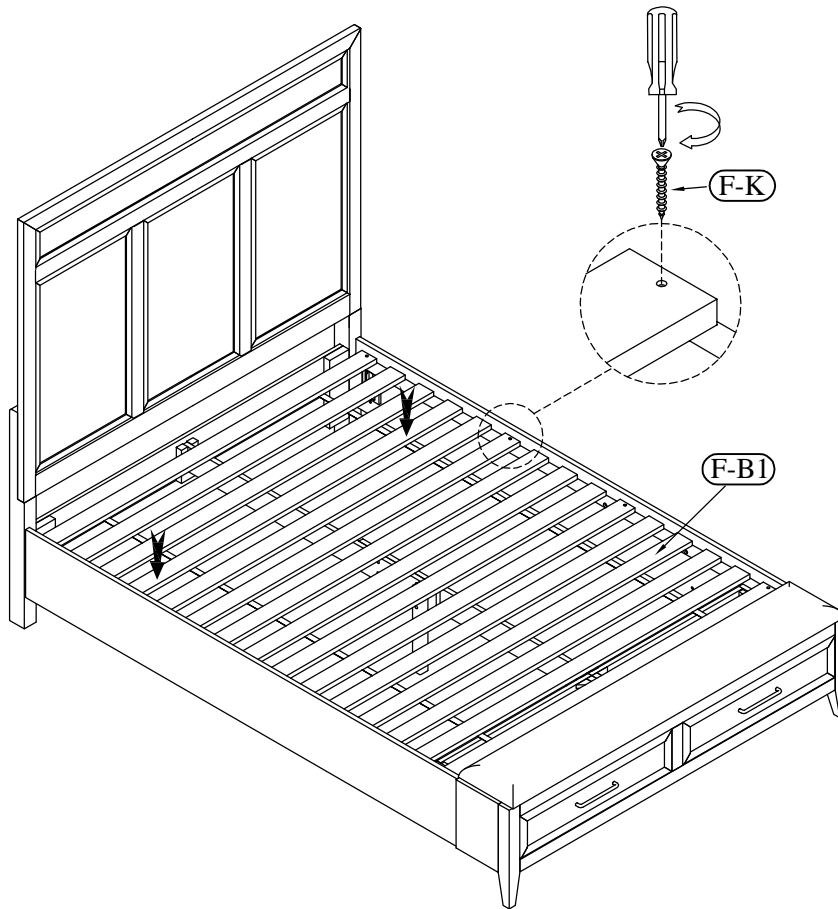


Complete

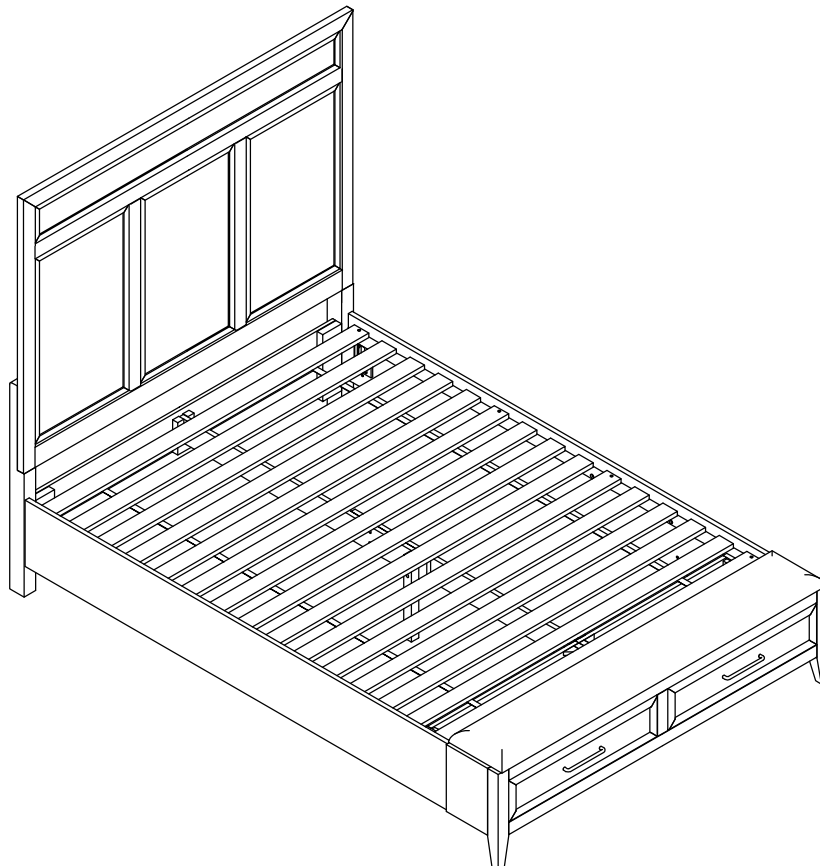

5/0 Queen Bed

46174 -- 4/6-5/0 Panel Headboard

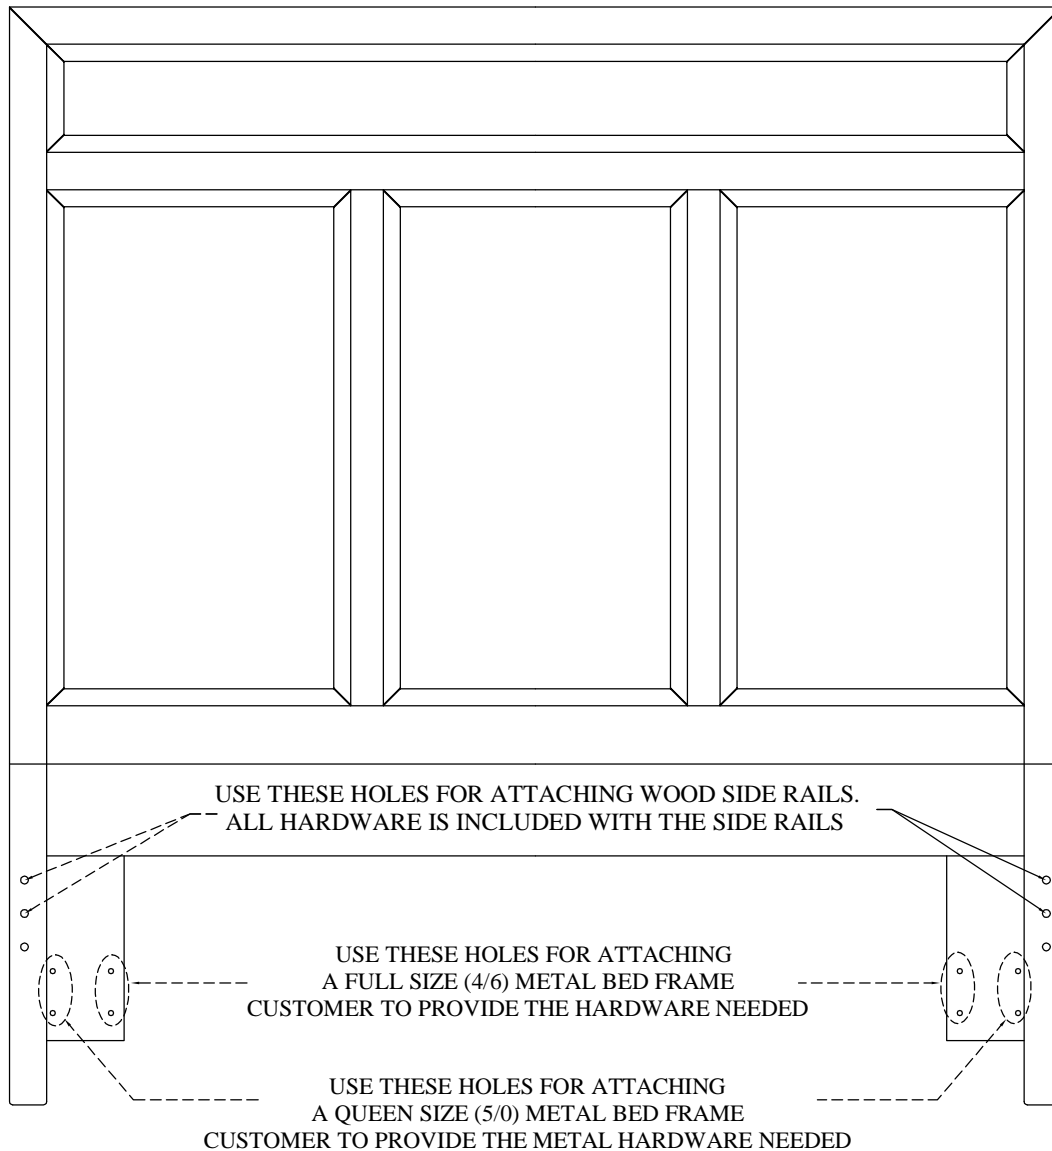

4/6 & 5/0 Bed

**THE HEADBOARD MAY BE USED ALONE WITH
A QUEEN OR FULL SIZE METAL BED FRAME.**