





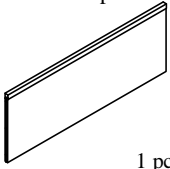

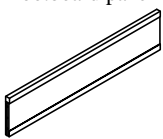

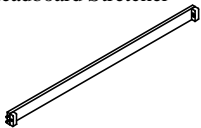

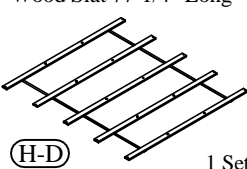









Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.








Hardware and Parts packed with the Panel Headboard And Panel Footboard 83780

<p>83780 Headboard panel</p>  <p>(H-A) 1 pc.</p>	<p>83780 Footboard panel</p>  <p>(H-B) 1 pc.</p>	<p>Headboard Stretcher</p>  <p>(H-C) 1 pc.</p>	<p>Wood Slat 77-1/4" Long</p>  <p>(H-D) 1 Set.</p>	<p>Support Leg 7 3/4" x 1 1/4" x 1 1/4"</p>  <p>(H-E) 10 pcs.</p>	
<p>Allen Head Bolt ø5/16"-18 x 1-3/4"</p>  <p>(H-F) 2 pcs.</p>	<p>Spring Washer ø5/16"</p>  <p>(H-G) 14 pcs.</p>	<p>Flat Washer ø5/16" x 19*2mm</p>  <p>(H-I) 2 pcs.</p>	<p>Allen Key 5mm</p>  <p>(H-J) 1 pc.</p>	<p>All-Thread Bolt ø5/16-18 x 3-1/2"</p>  <p>(H-K) 12 pcs.</p>	
<p>Curved Washer ø5/16"</p>  <p>(H-L) 12 pcs.</p>	<p>Flat Washer ø5/16" x 16*2mm</p>  <p>(H-M) 12 pcs.</p>	<p>Nut ø5/16 x L17</p>  <p>(H-N) 12 pcs.</p>	<p>Open Wrench 12mm</p>  <p>(H-P) 1 pc.</p>	<p>Wood Screw #8 x 1"</p>  <p>(H-Q) 10 pcs.</p>	<p>Screw Driver not included</p> 

Hardware and Parts packed with the Poster Bed Post 83771

<p>83771 Headboard Post (Left)</p>  <p>(P-A) 1 pc.</p>	<p>83771 Headboard Post (Right)</p>  <p>(P-B) 1 pc.</p>	<p>83771 Footboard Post (Left)</p>  <p>(P-C) 1 pc.</p>	<p>83771 Footboard Post (Right)</p>  <p>(P-D) 1 pc.</p>
---	--	--	--

Hardware and Parts packed with the Bed Rail 83772

<p>Panel Bed Rails 83772</p>  <p>(R-A) 2 pcs.</p>	<p>All-Thread Bolt ø5/16-18 x 3-1/2"</p>  <p>(R-B) 8 pcs.</p>	<p>Curved Washer ø5/16"</p>  <p>(R-C) 8 pcs.</p>	<p>Flat Washer ø5/16" x 16*2mm</p>  <p>(R-D) 8 pcs.</p>	<p>Spring Washer ø5/16"</p>  <p>(R-E) 8 pcs.</p>	<p>Nut ø5/16 x L17</p>  <p>(R-F) 8 pcs.</p>
<p>Open Wrench 12mm</p>  <p>(R-G) 1 pc.</p>					

King Bed

83780 King Poster bed Headboard - Footboard Panels


83771 Queen - King Poster Bed Post

83772 Queen - King Poster Bed Rails


King Bed

83771 Queen - King Poster Bed Post

STEP 1

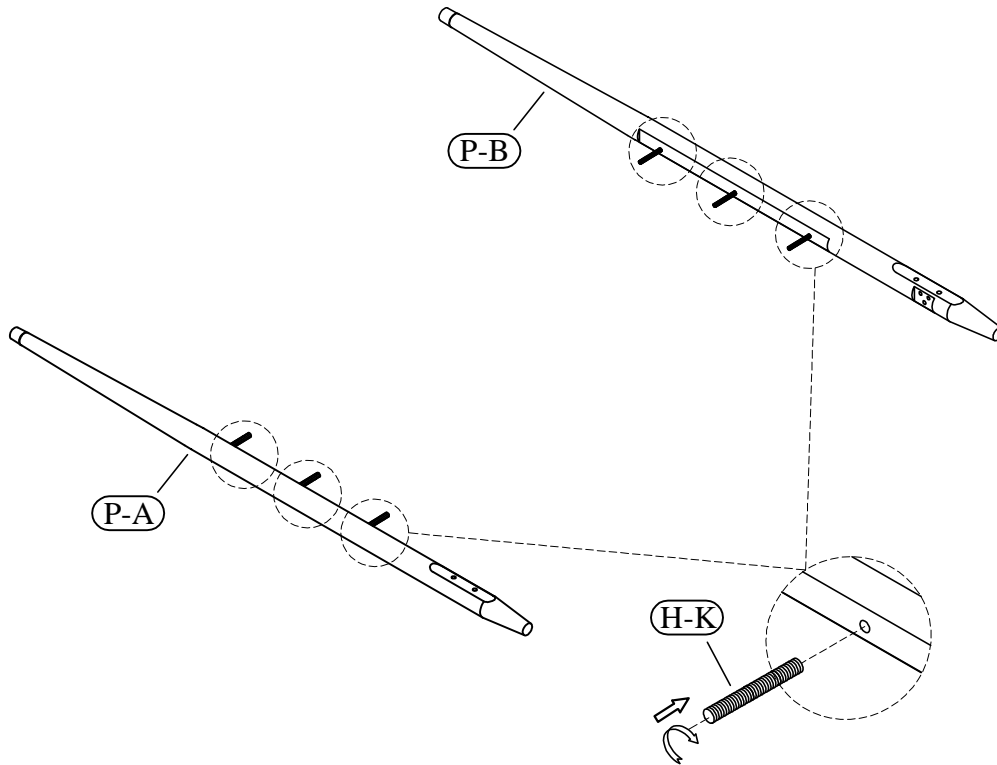

STEP 2

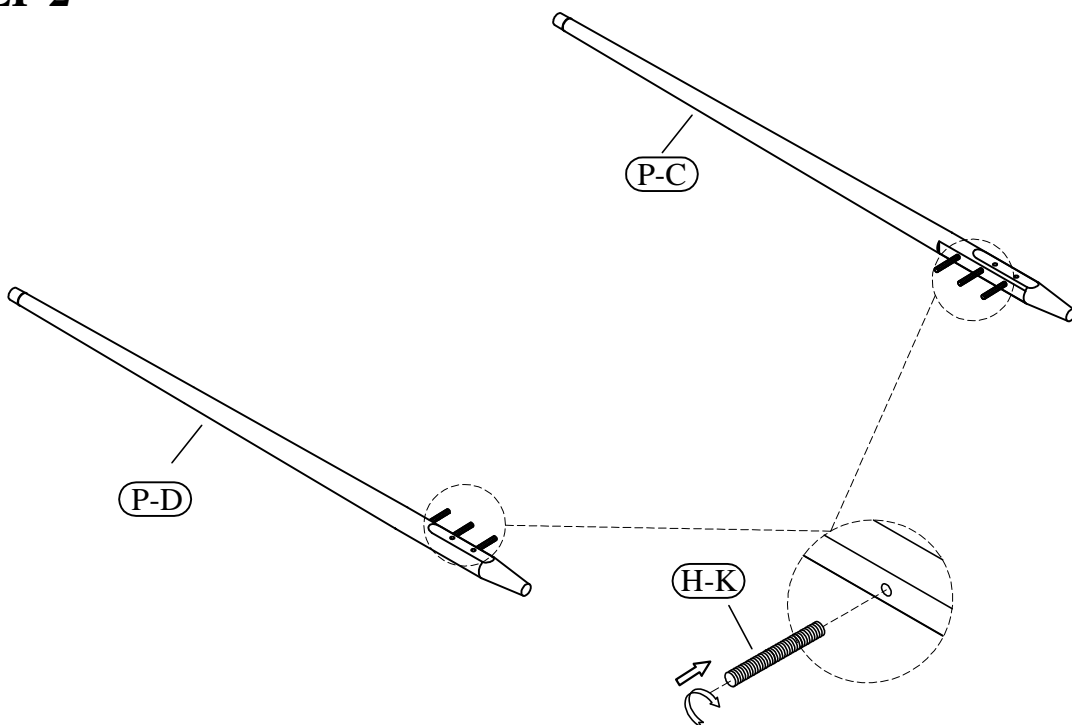


King Bed


83780 King Poster bed Headboard - Footboard Panels

83771 Queen - King Poster Bed Post

STEP 3

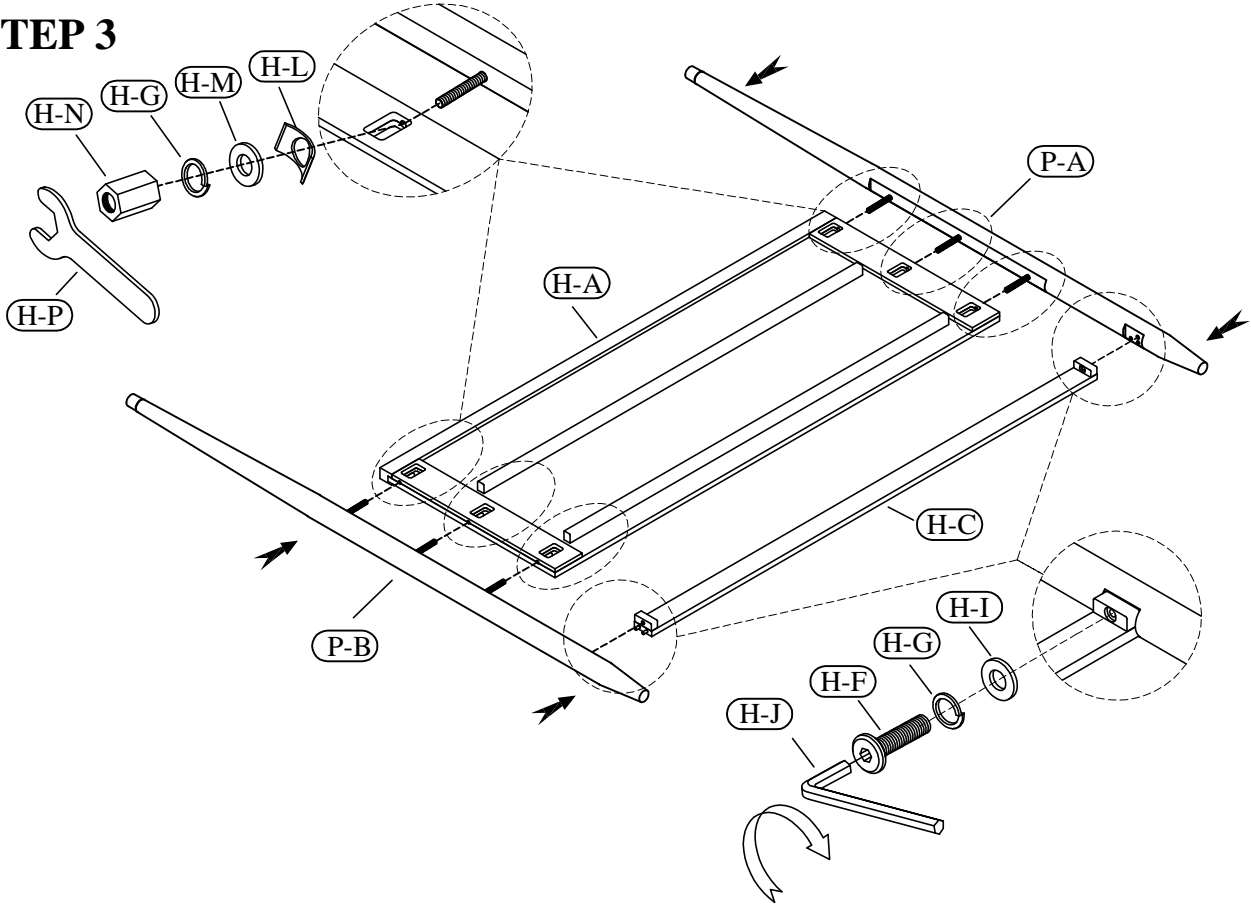


STEP 4

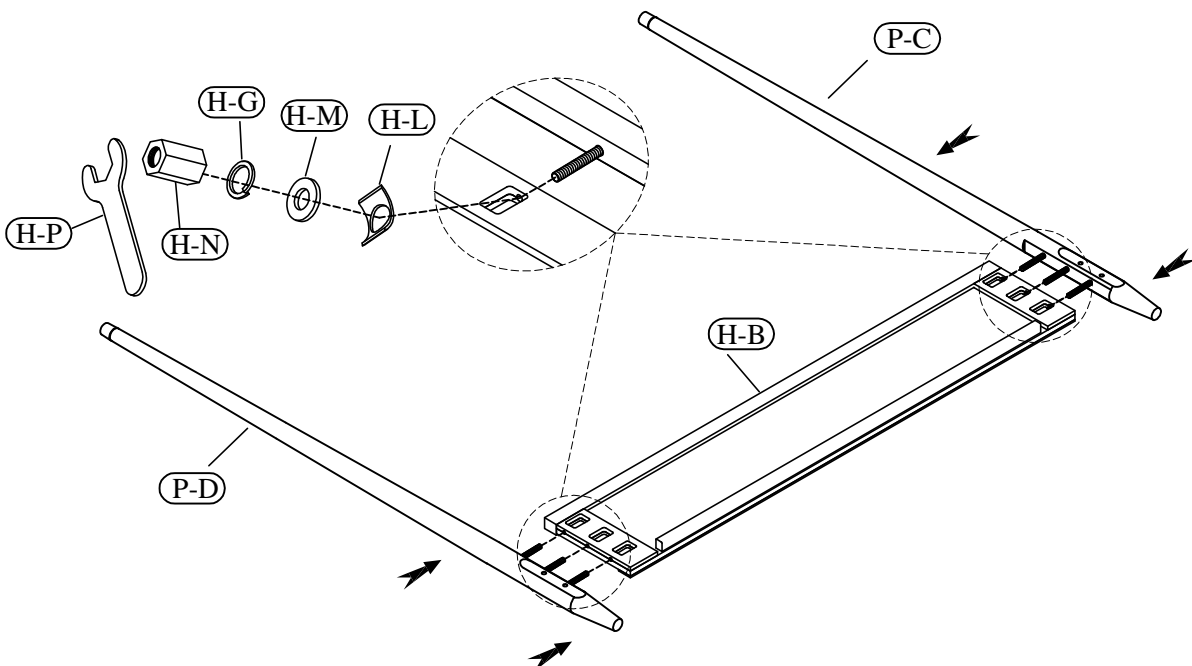


King Bed

King Poster bed Headboard - Footboard Panels
83771 Queen - King Poster Bed Post

STEP 5

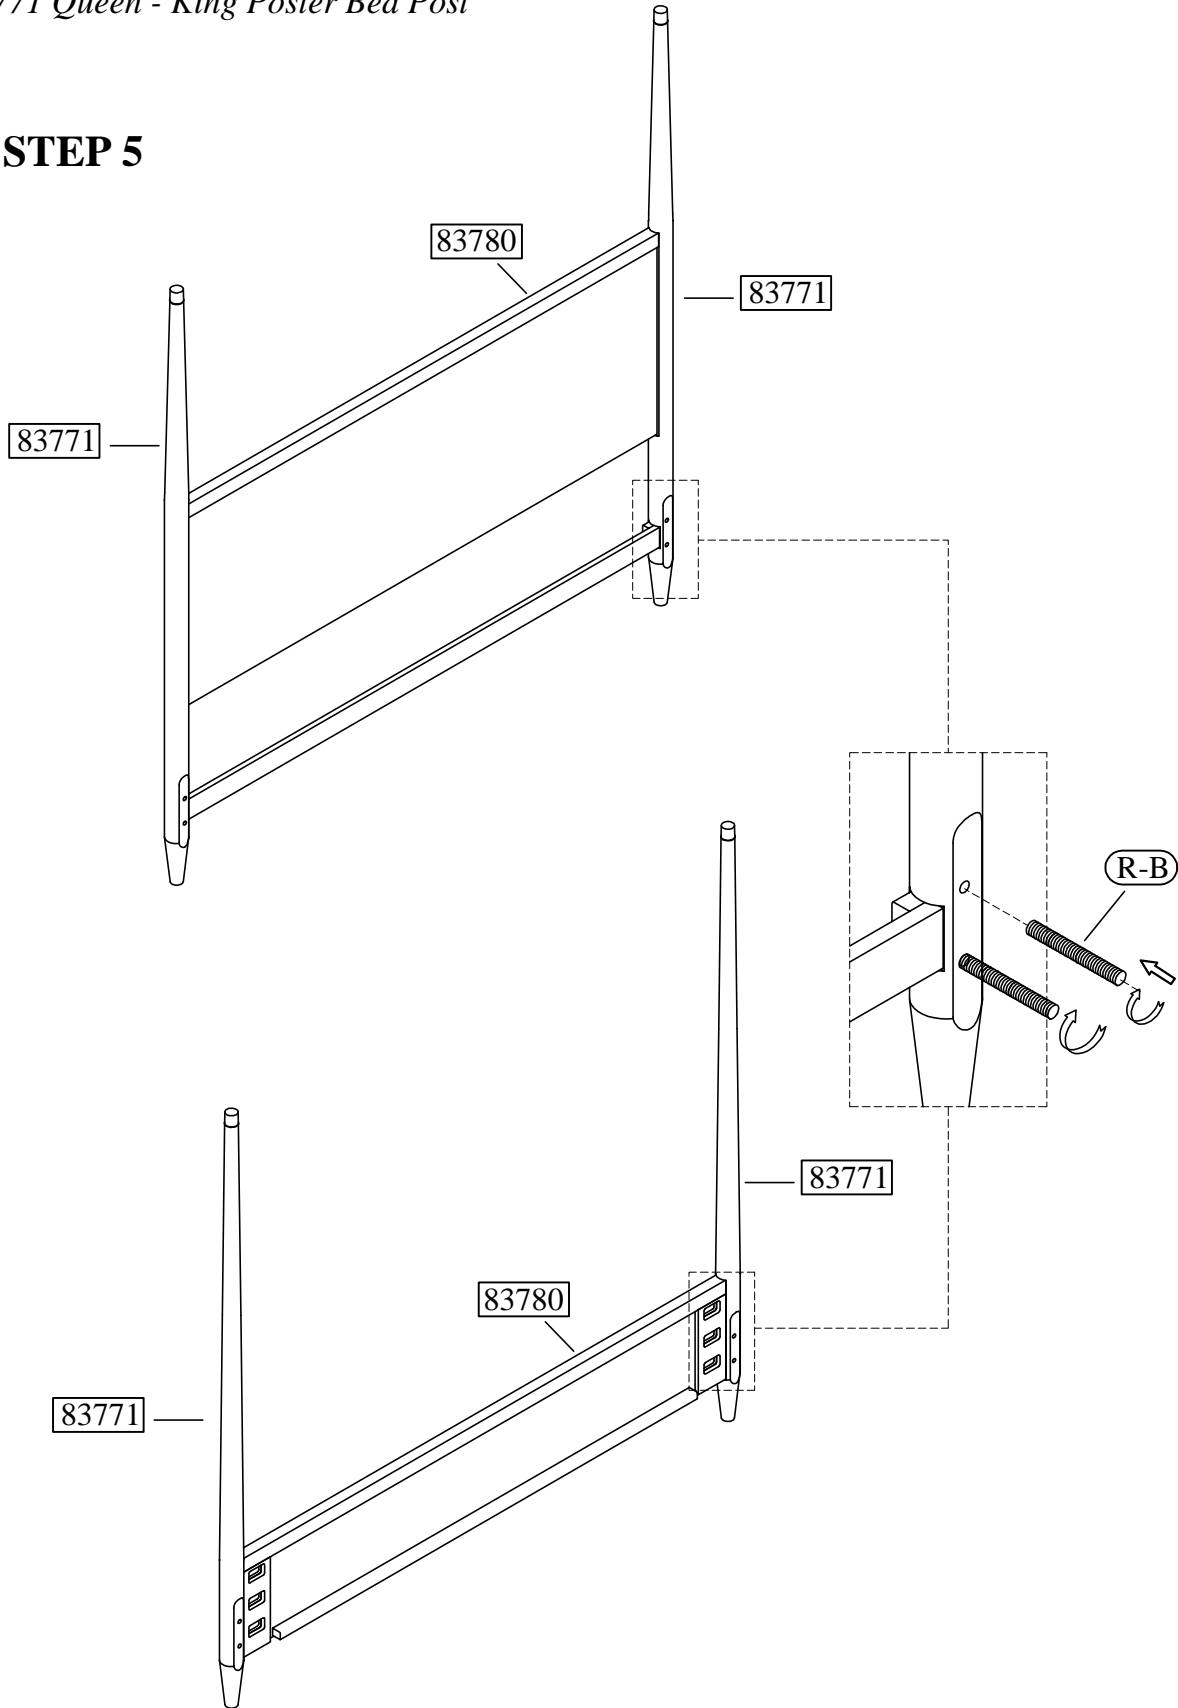


STEP 6

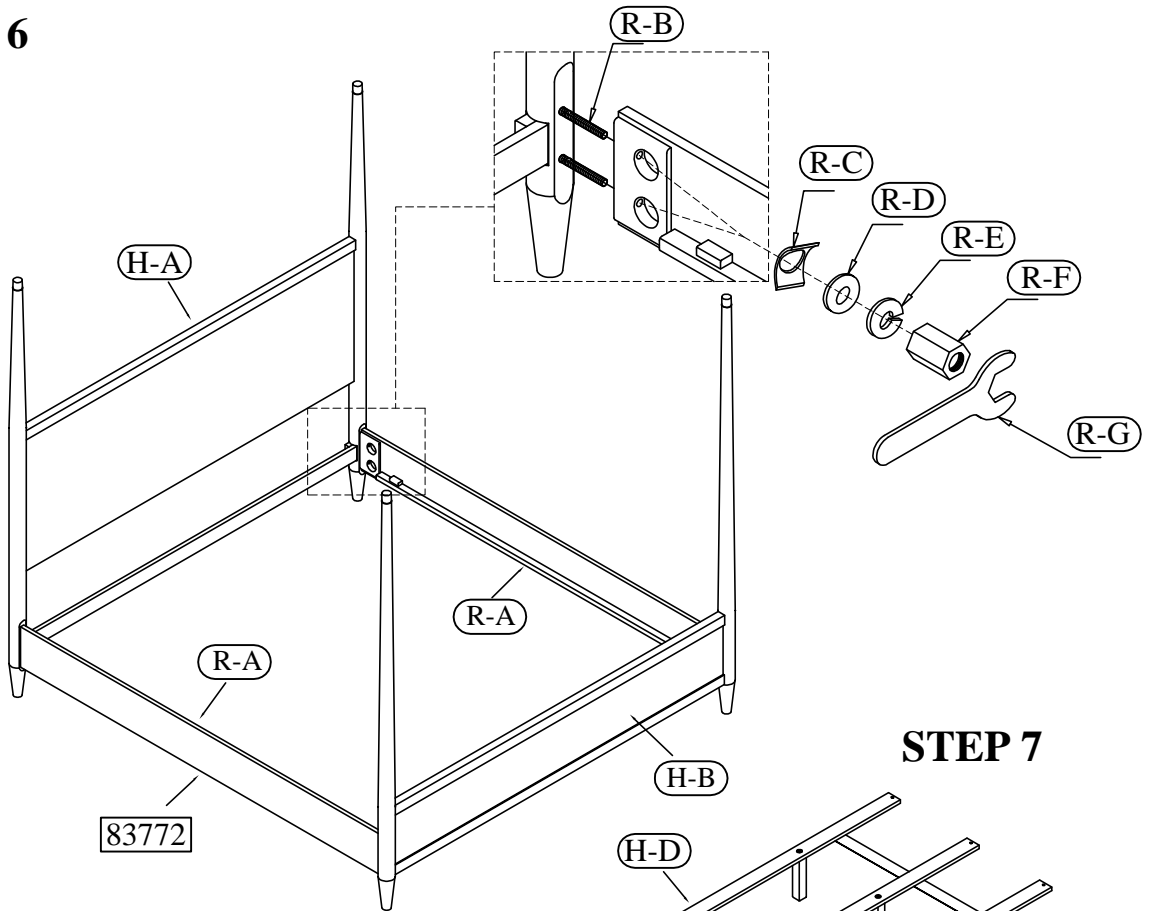

STEP 7

Attention : The bed slat straps should be located on the bottom side when properly installed.

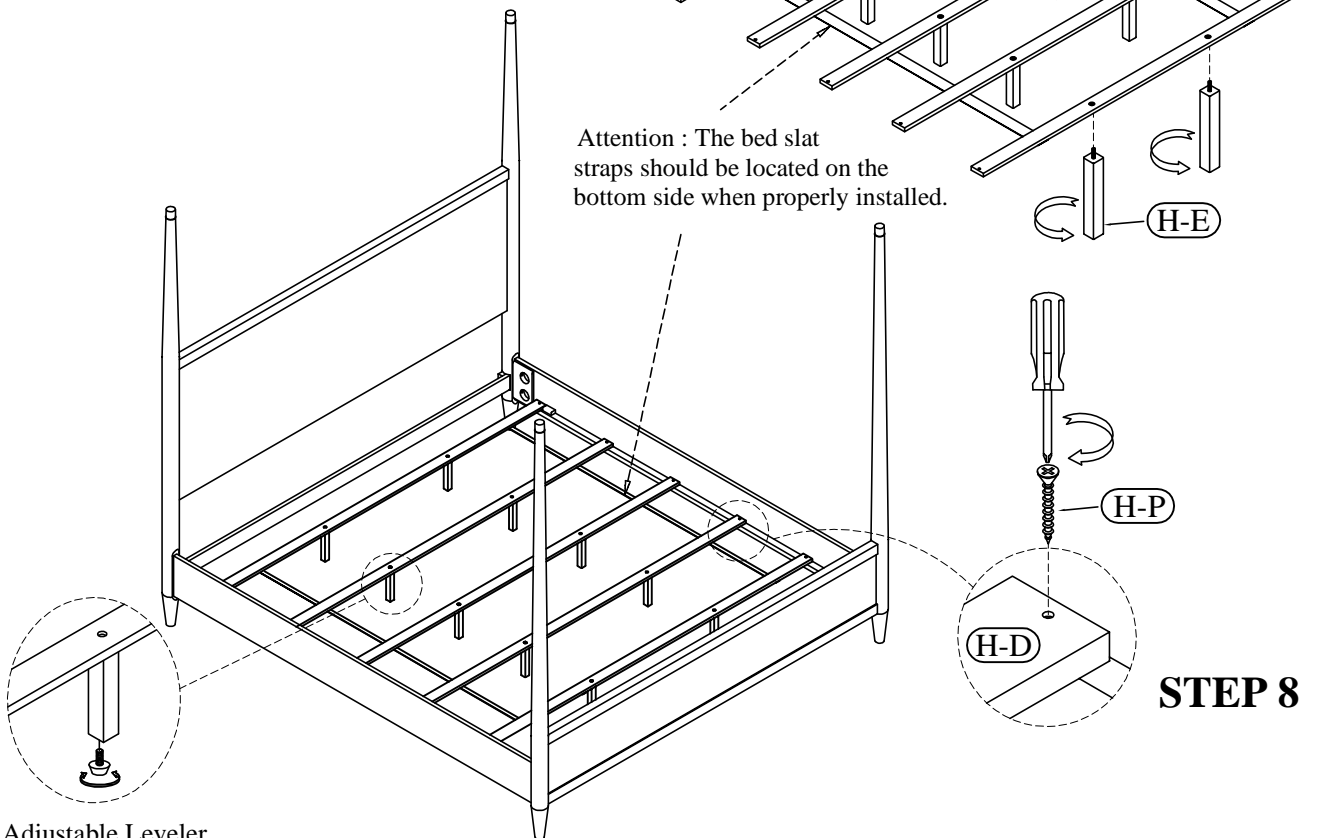

STEP 8

Adjustable Leveler