

email: info@riverside-furniture.com

4mm Allen Key

(G)

8 pcs.

MIX-N-MATCH CHAIR Dining Room Assembly Instructions

Made in Viet Nam

Page 1 of 3

Warning:


Ø5/16"

 (F)


Flat Washer

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

92600 / 01 / 02 Swoop Arm Uph Chair

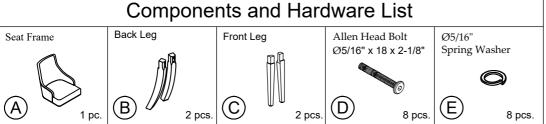

STEP 1: Remove Velcro strips on the seat frame to assemble the legs.

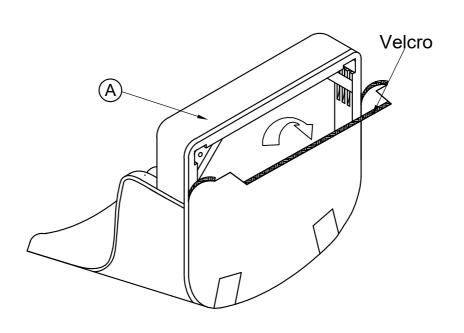

Riverside

email: info@riverside-furniture.com


MIX-N-MATCH CHAIR
Dining Room
Assembly Instructions

Page 2 of 3


Made in Viet Nam

92600 / 01 / 02 Swoop Arm Uph Chair

STEP 2:

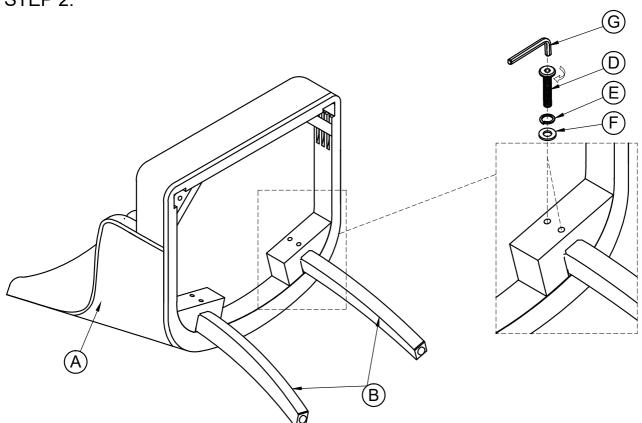

STEP 3:

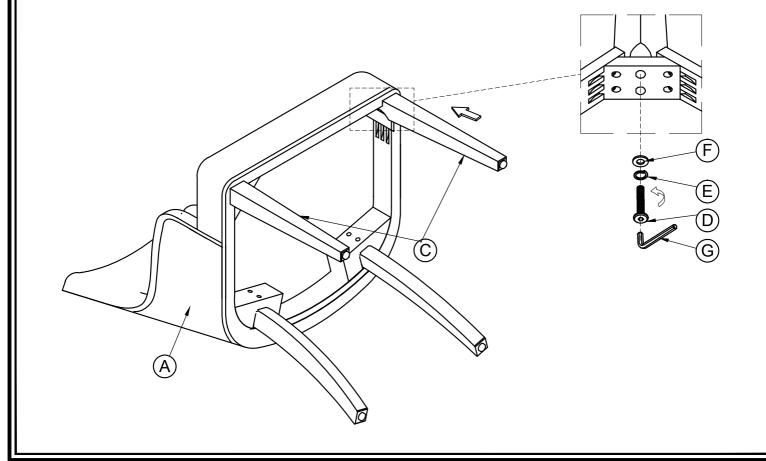



email: info@riverside-furniture.com


MIX-N-MATCH CHAIR
Dining Room
Assembly Instructions

Page 3 of 3

Made in Viet Nam

92600 / 01 / 02 Swoop Arm Uph Chair

STEP 4: Attach all Velcro strips to the seat frame.

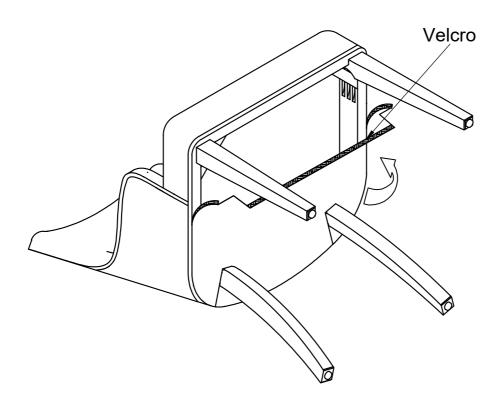

COMPLETE

